


Redefine Innovative Metering

SQ 96

LED Type Electronic Synchroscope

LED Type Electronic Synchroscope for Synchronizing Application

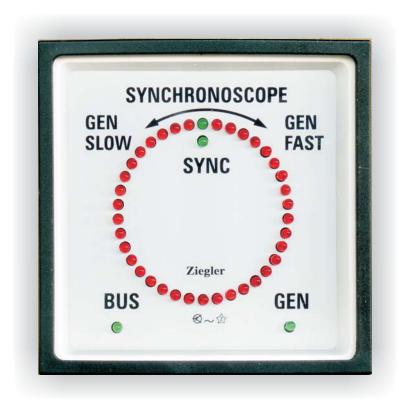

The Electronic Synchroscope is Designed to Provide an Illuminated Indication of Actual Phase Difference Between the BUS Voltage (Reference Voltage) and the GENERATOR Voltage (Incoming Voltage).

INTERNATION OF THE POST OF THE

The Electronic Synchroscope is designed to provide an illuminated indication of actual phase difference between the BUS Voltage(reference voltage) & the GENERATOR Voltage(incoming voltage)

It denotes the actual frequency difference corresponding to the inverse of time taken for one rotation of the illuminated vector spot. When two alternators are paralleled, it is necessary that,

1(Frequency must be equal.

2(Phase must be same.

Sychroscope is, hence used to indicate the Phase & Frequency difference between two AC alternators, which are to be paralleled.

Description

he rotation of the vector spot is with reference to the bus voltage. If the vector spot LED turns clockwise, it indicates the GENERATOR frequency is greater than the BUS frequency. It means the speed of the generator must be reduced by the operator.

If the spot LED turns anticlockwise, the GENERATOR frequency is less than BUS frequency. In this case speed of the generator must

If 'T' is the time taken for one rotation, the frequency difference can be calculated as 1/ T = A f

Example: Let the bus frequency be 50 Hz.The vector spot takes 10 Sec. for one rotation, clockwise.

1/10 = 0.1 Hz.


The frequency difference = 0.1Hz. Hence we can infer that GENERATOR frequency is 50.1 Hz.

If the Frequency & Phase of BUS signal matches with those of GENERATOR signal, the two green led's at 12 o'clock position glow. If the Frequency matches & Phase does not, then one red led corresponding to the phase difference will glow.

Favorable condition for" Switching in" the Generator

- 1. Ensure that the frequency difference between two inputs is within the requirements of user as follows: Measure time taken for 1 complete rotation of the vector spot inSECOND(T).
 - The frequency difference will be Af = 1/T(Hz)
- 2. Provided the frequency difference is within acceptable limits, wait till the SYNC mark LED s(two green LED s at 12 o'clock position)glow. At this instant, it is safe to CONNECT the **GENERATOR to BUS**

Functional Principle

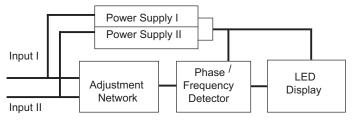

The Bus & Gen inputs are fed to the Frequency & Phase detection network. The output duty cycle of the network corresponds to the frequency difference between Bus & Generator Voltage. The detector network also determines the actual phase difference.

Mechanical Data

Terminals

Case details Moulded square case suitable for mounting in Control / Switchgear

panels, machinery consoles. Glass filled polycarbonate, Case material

flame retardant and drip proof as per UL 94 V-O.

Front facia Glass Colour of bezel Black Position of use Vertical Panel fixing Swivel screws. Mounting Stackable in a single cutout Panel thickness ≤ 40 mm

Hexagon studs, M4 screws and wire clamps E3 (DIN 46282)

Electrical Data

Frequency & Phase difference Measured quantity Power consumption 6 VA Max Enclosures code IP 52 case (IEC 529) IP 00 for terminals Insulation class group A according to VDE 0110 Insulation voltage 660 V Proof voltage 2kV

Frequency range 35-70 Hz Pull in / drop out Freq. + / - 9 Hz Installation catogory 300 V CAT III (IEC1010)

insulation resistance

Reference conditions

23°C + 3°C Ambient temperature Rated voltage ± 2% Input Voltage Rated frequency 50 Hz ± 0.1 %

Environmental Conditions

Climatic suitability Climate category II as per

IS: 1248

(climatic class 3 according to

> 50 Mohm at 500 V d.c.

VDE / VDI 3540) - 10...+ 55 °C Operating temperature -20...+ 65 °C Storage temperature

≤ 75 % annual average non -Relative humidity

condensing 15g, 11ms

Vibration resistance 10-150-10 Hz / 0.15 mm / 5 Cycles / 10 octave per minute.

Applicable Standards

Shock resistance

Nominal case and cutout dimensions for indicating measuring instruments Connections and Terminal markings for panel meters

Terminal bolts / leads. Clamp straps for connections Safety requirements and protectivemeasures for Electrical indicatinginstruments and their accessories

Performance specification for direct acting indicating analogue electrical

measuring instrument and their accessories Environmental conditions

Front frames for indicating measuring instruments principal dimensions **UL Combustibility Class**

Technical conditions of delivery for electrical instruments

Mechanical Strength (Free fall test, Vibration test) IS 2419 DIN 43700 IS 1248 DIN 43807 DIN 46200/46282 DIN 46282 IS 9249 - 1979 DIN 40050 / 8-70. VDE 0110/ 11-72 VDE 0410/ 10-76 IEC 529 . IEC 1010 IS 1248-1983 IEC 51/DIN EN 60051

IS 1248 - 1983 IS: 9000 VDE / VDI 3540 **DIN 43718**

UL 94 V-0 DIN 43701

IS 1248/IEC 51 IEC 1010. IS 9000-1979 VDE 0411,part 1 Sec 43/44

Options


Case

Front facia Antiglare glass Red, Yellow, Blue, White. Colour of bezel Colour of LED s Orange, Yellow


Special markings Numbering / Lettering. ents Order No. SQ - 96-E1.R0-920405-26-2013-EN

Connections

Туре	Terminal	
BUS	1-3	1-2
GEN	4-6	4-5
SQ-96	440V	380V
SQ-144	240V	220V
	480V	415V
	110V	100V
	127V	120V

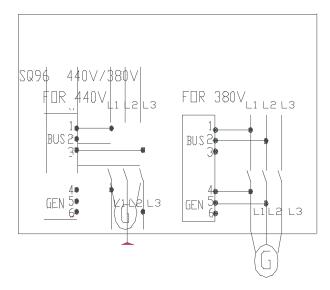

Dimensions

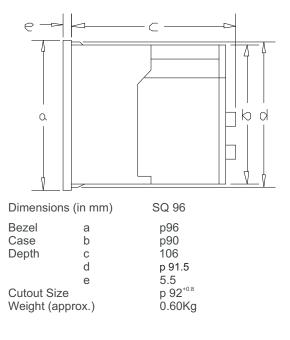

Ordering Information

Туре		
SQ	Electronic Sychroscope	
Front Dimension		
96,144	96 mm x 96 mm , 144 mm x 144 mm	
Rated voltages	Refer to selection table inside	
Front facia	Normal glass*1	
	Antiglare glass ³	
Colour of Bezel	Black*1	
	Red, Blue, Yellow, White*3	
Position of use	Vertical (0-360°)	
Dial	Additional lettering on request	
	Additional numbering on request ³	
Logo	ZIEGLER ¹ ,for Indian Sales. C.G ¹ ,for export through Crompton Greaves I.D. Others ³	

^{*1}Standard

Ordering example

SQ 96, rated voltage AC 230 V.

Specifications are subject to change without notice)10/98(

Safety Precautions

Instruments with damaged bezels or window glasses must be disconnected from mains.

Adequate safety clearance must be maintained to control panel fasteners and to sheet metal housing, if non-insulated connector

Bezels and window glasses should be replaced under Voltage free conditions.

ZIEGLER INSTRUMENTS

Schnepfenreuther Weg 6, D-90425 Nürnberg, Germany.

(+49)(911) 38 492 45 TEL. (+49)(911) 32 26 212

E-MAIL WEBSITE info@ziegler-instruments.com www.ziegler-instruments.com







²Please clearly add the desired specifications while ordering